
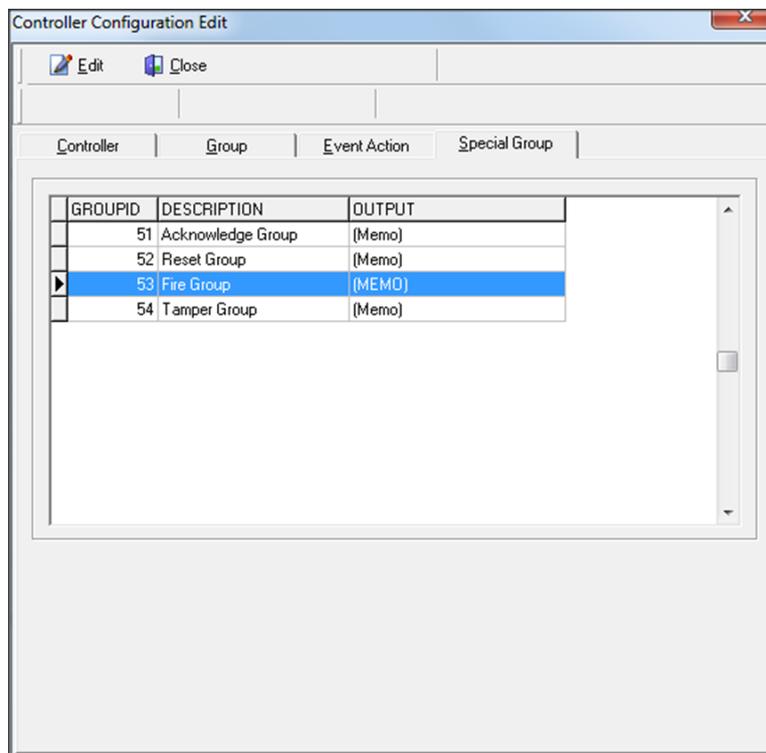


# Configure the Special Group in IBSS2000

## Overview

Special Group is group 51 to 54. Only group 53 is available for usage, group 53 is the fire group. We can configure which output to trigger during fire alarm detection.

Configuration of special group is done in individual controller.

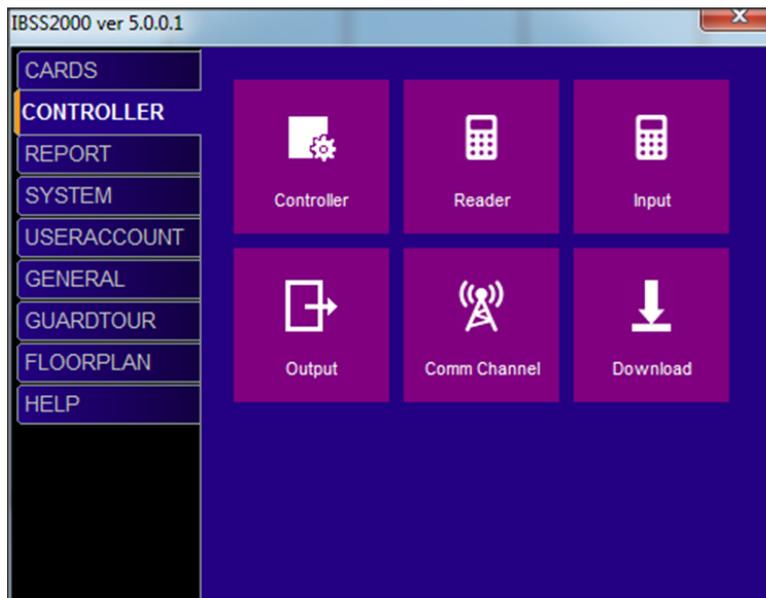

Click on Output Member to change the fire alarm output point.

