

Enroll Cardholder to AFR8630 via Onboard Keypad LCD

Overview

The AFR8630 allows owner to do cardholder administration and reader configuration at the reader terminal using the LCD and keypad.

Enroll Card

Tue Jun-16-09 GMT **17:37** +00

From the Home screen press F1 button twice very fast to login to reader

- 1. User
- 2. Setting
- 3. Reset
- 4. Misc

Press key 1 to get into user administrative menu

Present Card or Input id:

Present your mifare card or key in your id number

Present Manager

Key in default password '111111' follow by # key

- 1. Add User
- 2. Delete User
- 3. Activate User
- 4. Deactivate User

Press key 1 to Add User

Reg Finger? Yes(#)/No(*)

If you want to register finger print key # else key *

If you register finger the reader will prompt if you want to register second finger

Reg Other Finger? Yes(#)/No(*)

Note that the reader do not allow same finger to be enrol twice, even under different card or ID.

Write Mifare? Yes(#)/No(*)

SKIP THIS STEP

Reader will prompt to write data to Mifare card. Press key * as this mode is not enable in the operation

Delete Card

From Add Card session step 3

Choose Delete User

Present Card or Input id:

If your user is using Card please present card now else please key in ID.

Reg Password? Yes(#)/No(*)

Reader will prompt to register Password. Password refers to a 6 digit pin number.

Key # to register password, key * to skip

Present Card or Input id:
ABCDEF12
Del Success

The card have been deleted successful

Activate and Deactivate User

Added user can be temporarily deactivate for security reason.

To do that go login to the reader from default screen.

- 1. Add User
- 2. Delete User
- 3. Activate User
- 4. Deactivate User

Go to step 3 click Deactivate User by clicking 4

Present Card or Input id:

Present the card or key in id.

The reader will display status: Deactivate

To activate card repeat steps but select Activate User key 3