

Install and Terminate C302


Overview

C302 comes in few packaging.

C302 panel - (bare bone metal enclosure)





C302K1 - panel house in 350x400x120mm Wall Mount Enclosure comes with PSU 15Vdc 5A and 7Ah Lead Acid Battery.

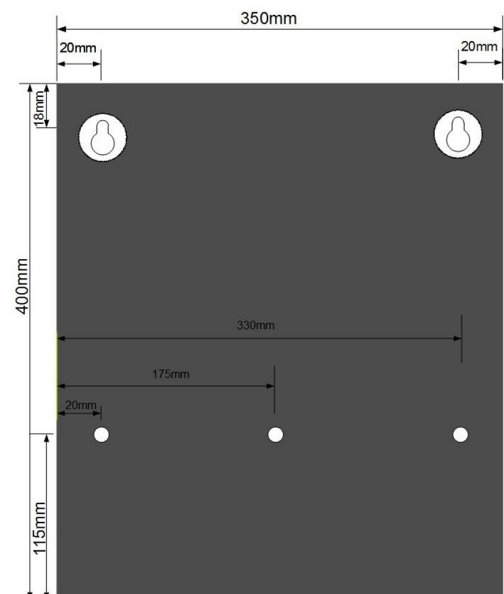

C302G1 - panel house in 350x400x120mm Wall Mount Enclosure comes with PSU 15Vdc 5A and 7Ah Lead Acid Battery.

C302 Panel Barebones

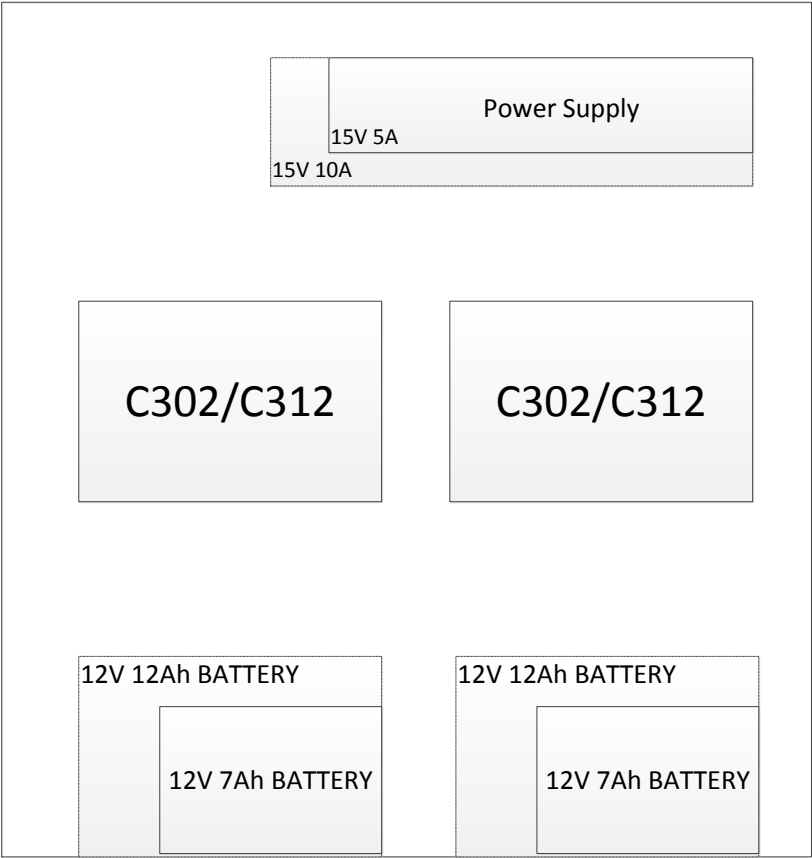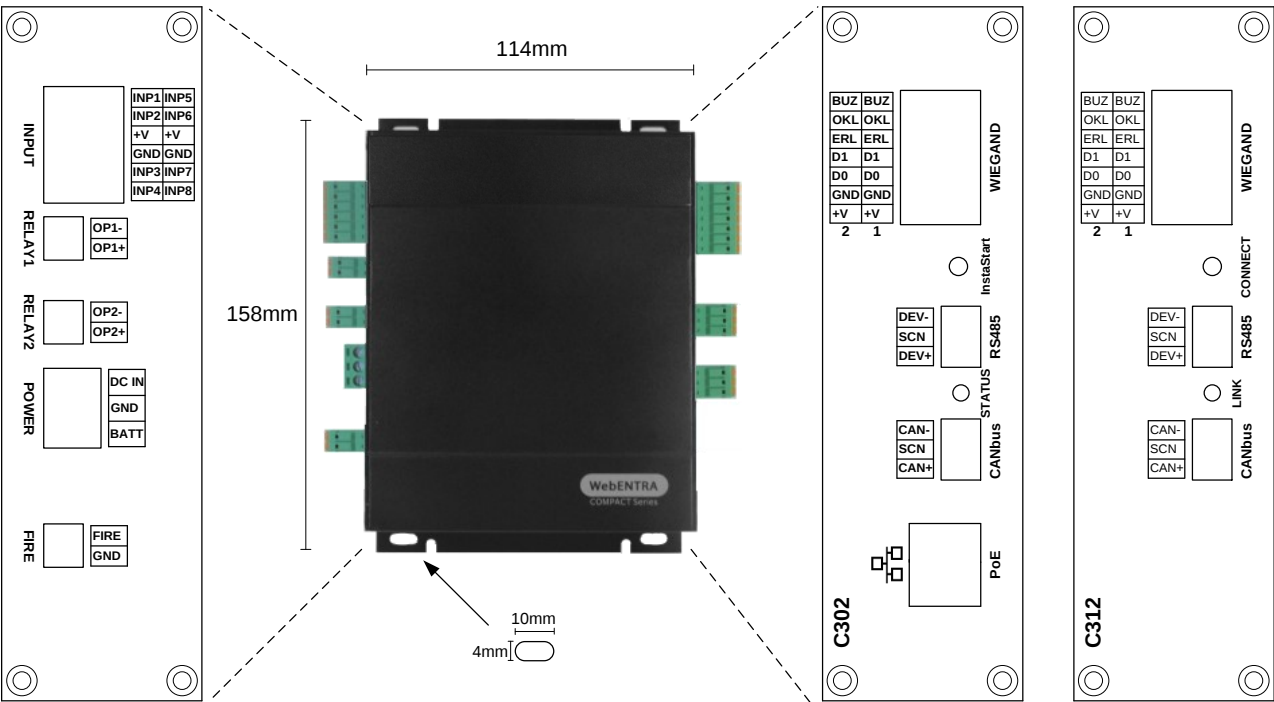

Termination point for 2 Door In & Out Reader using ASIS AMR series reader (RS485 Connection)

	Door 1		Door 2	
Termination Point for Input	Exit Button	Door Sensor	Exit Button	Door Sensor
	INP1, GND	INP2, GND	INP3, GND	INP4, GND

	Door 1	Door 2
Termination Point	Lock	Lock
for Relay	OP1+, OP1-	OP2+, OP2-

RS485 Connection Reader

Termination Point	Reader 1 (Door 1 IN)	Reader 2 (Door 2 IN)	Reader 3 (Door 1 OUT)	Reader 4 (Door 2 OUT)
Wiegand	+V, GND	+V, GND	+V, GND	+V, GND
RS485	DEV+, SCN, DEV-	DEV+, SCN, DEV-	DEV+, SCN, DEV-	DEV+, SCN, DEV-

Wiegand Connection Reader

Termination Point	Reader 1	Reader 2
Wiegand	+V, GND, D0, D1, ERL, OKL, BUZ	+V, GND, D0, D1, ERL, OKL, BUZ