
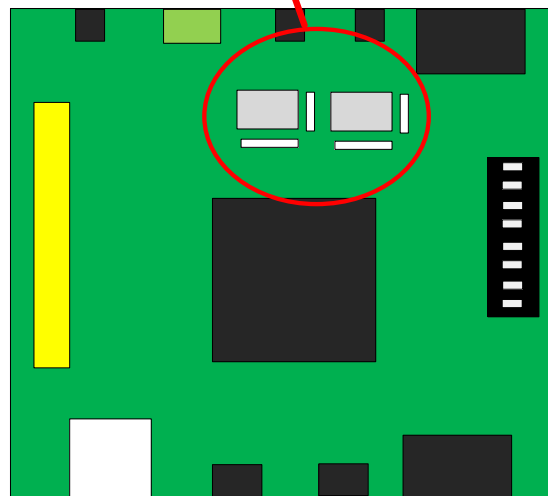
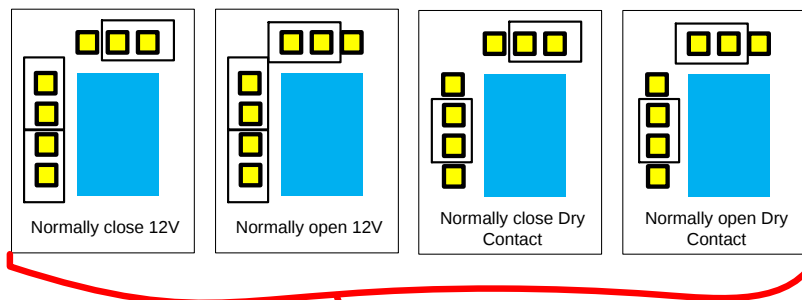


Changing Relay Setting in C302

Overview

Unplug LAN Cable, remove all green connectors. Remove all 4 screw from Front or back panel. Slide out PCBA.

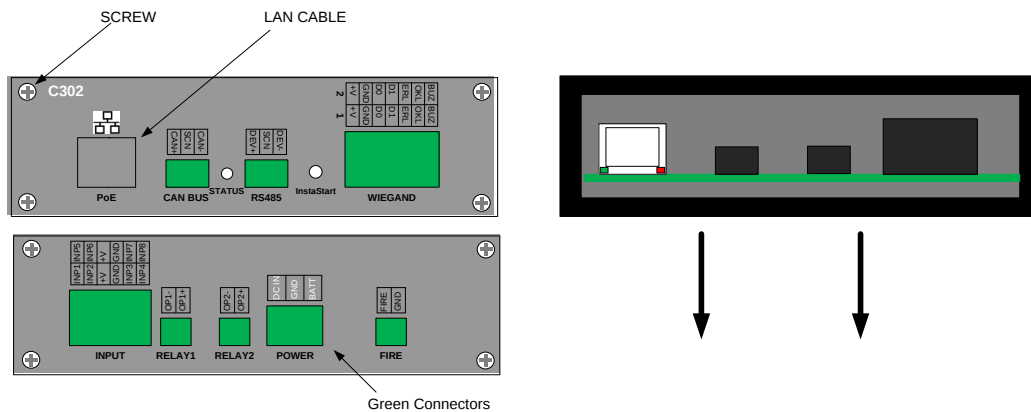

Change the Jumper setting accordingly. Fix back panel.