

Install AMR170 NFC Readers

Overview

The AMR170 reader comes with a back mounting plate. The back mounting plate must be mounted first on to the wall before the reader can be mounted. The back mounting plate wall screw mounting hole and wired thru hole position is illustrated in Figure 1.

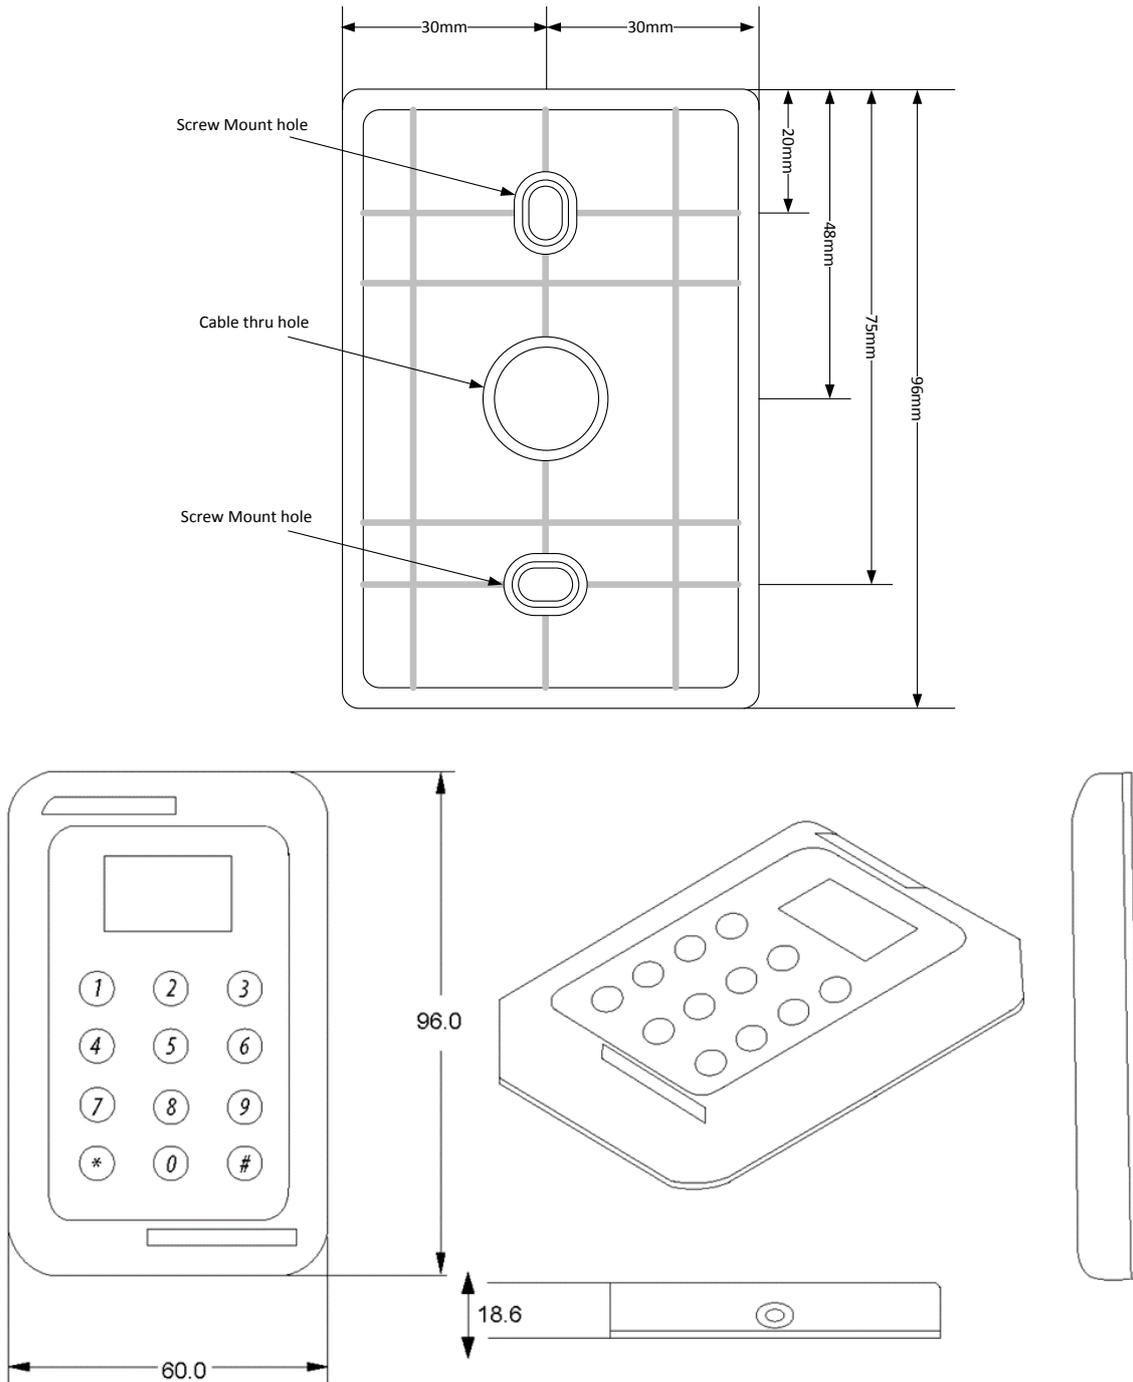


Figure 1. Physical Dimension

To remove the reader cover, unscrew from the bottom and flip to open the cover.

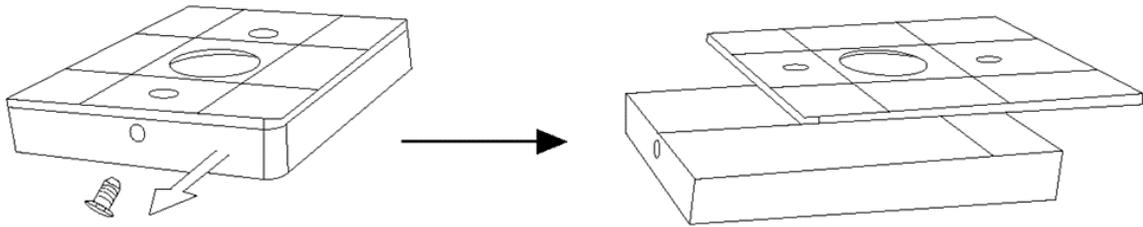


Figure 2. Removal of Cover

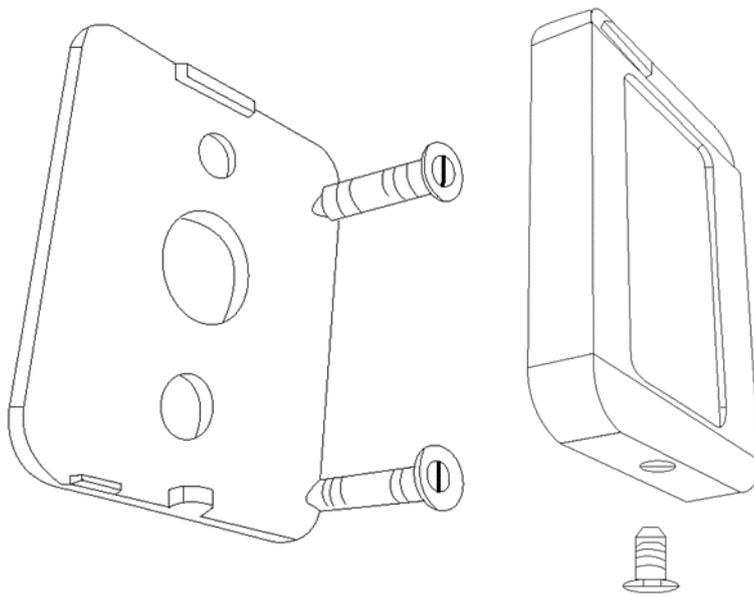


Figure 3. Mounting Method