

Using AMR175 Keypad

Overview

The AMR175 is the only reader in the family that comes with keypad. The purpose of the keypad is for the reader to function in Card & PIN Mode. Card & PIN mode is the 2 factor authentication, the highest form of security the reader can provide. The Reader has 4 rows by 3 column key which consist of key 0 to 9, plus * and # key. The * key is for cancel while the # key is for enter.

Reader must be set to operate in Card & Pin Mode in IBSS to use the keypad on the reader (see SD00031).

Flash Access Card on the reader, the reader will prompt for Pin Entry.

If PIN number is keyed-in, the reader will prompt if the entry is Access Granted or Access Denied.

If the PIN entry is wrong, the reader will prompt as Invalid Pin.